


APP GUIDE

GO GO COMPACT

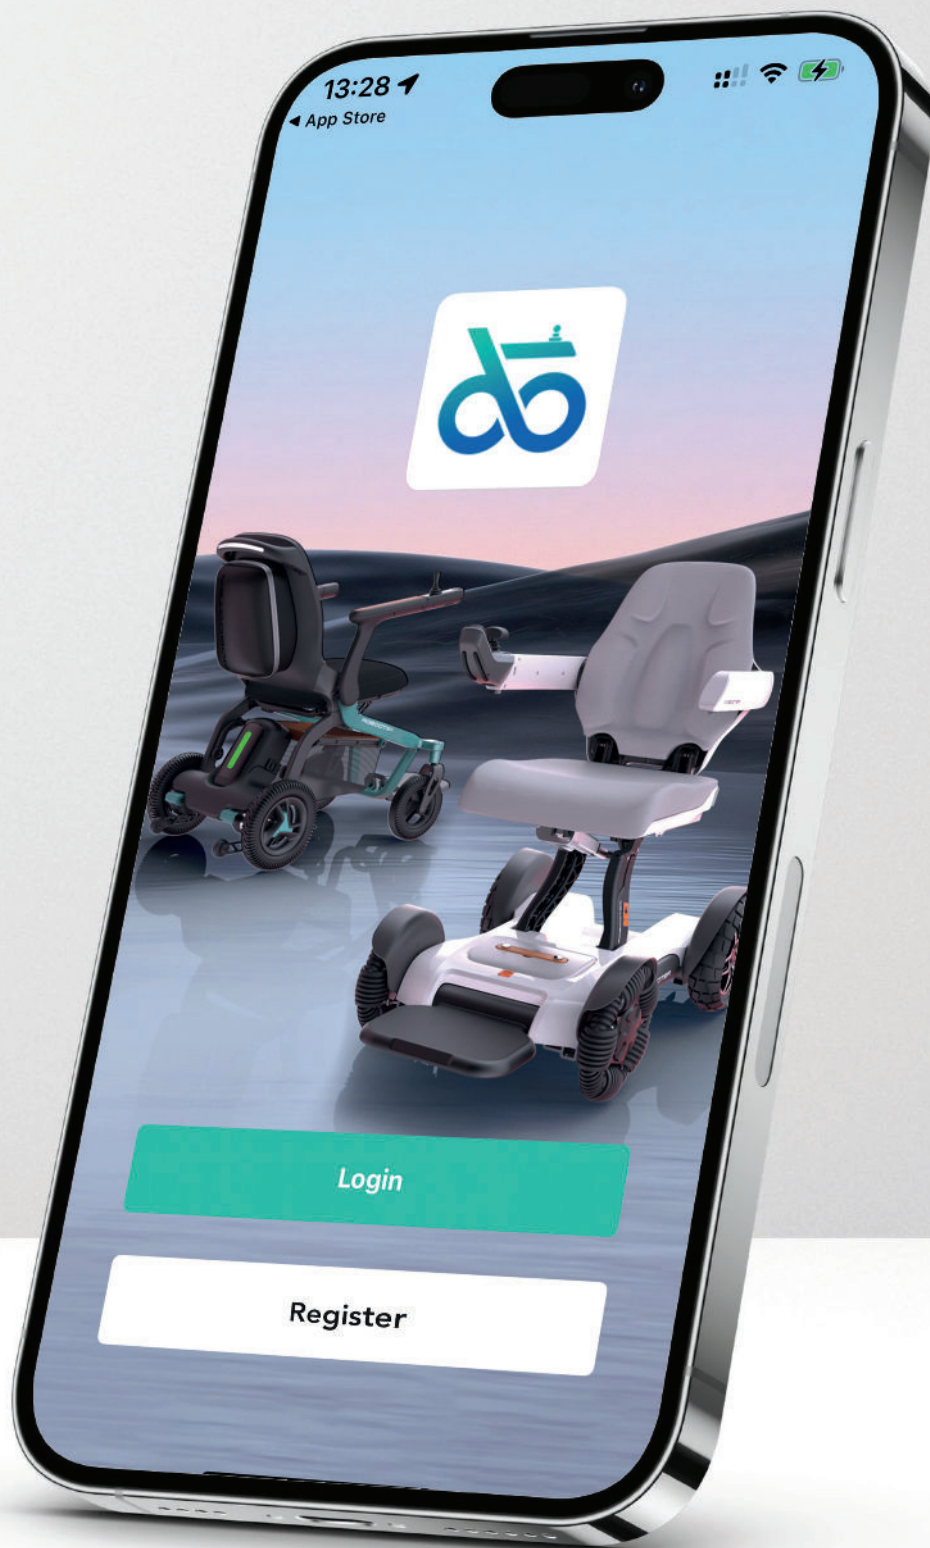


 Use your email address.

1




After clicking Register, fill in the registration information and it will prompt that the registration is successful.

2

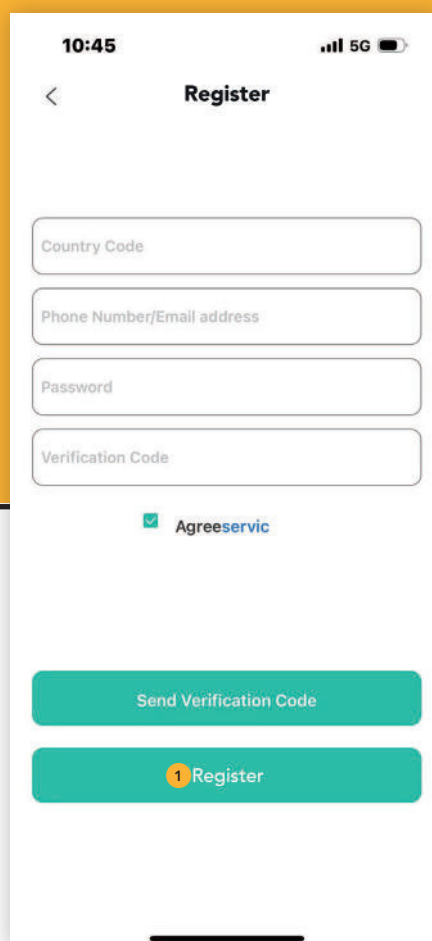

After successful login, you can proceed to the next step of binding the device.

2

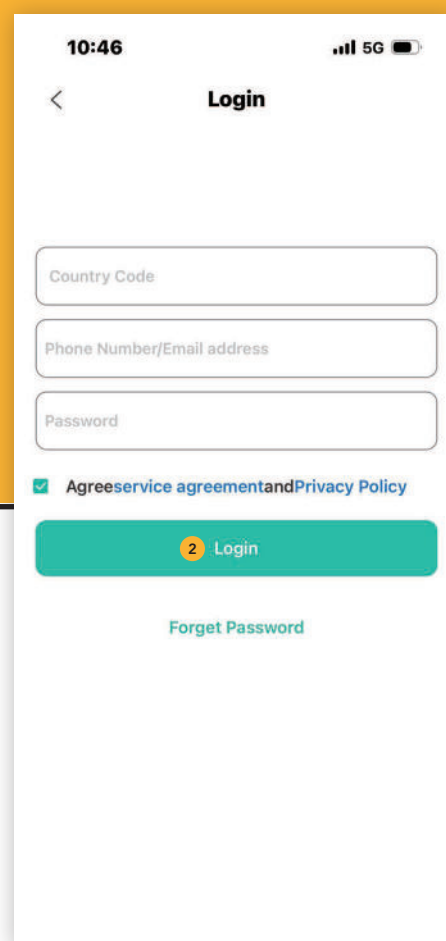


3



Select "IoT Devices"


 Please make sure your phone's bluetooth is turned on.

4

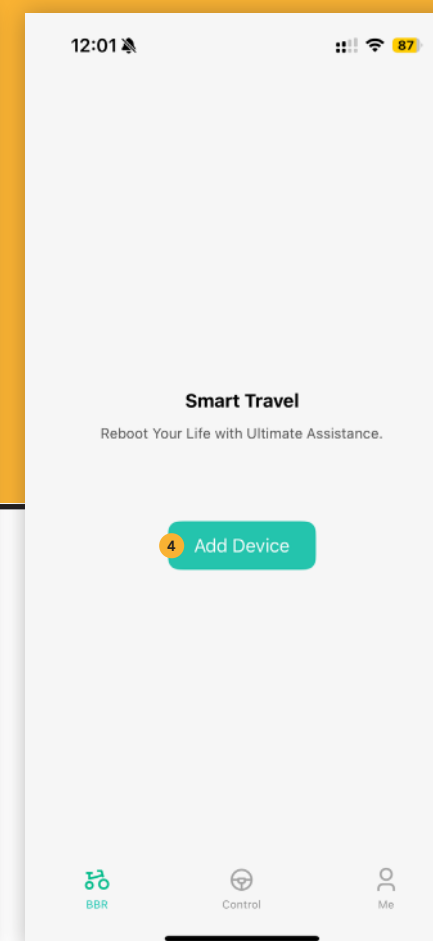

"Add Device" to enter the device search page.


5

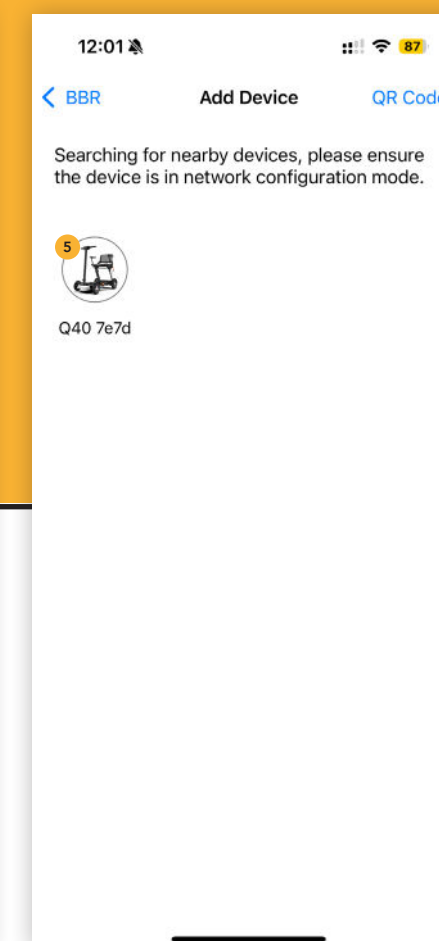


Select the device you want to pair with

Watch a how to video now!



 If already connected and you want to connect to a new smartphone you must first unpair from the old device.

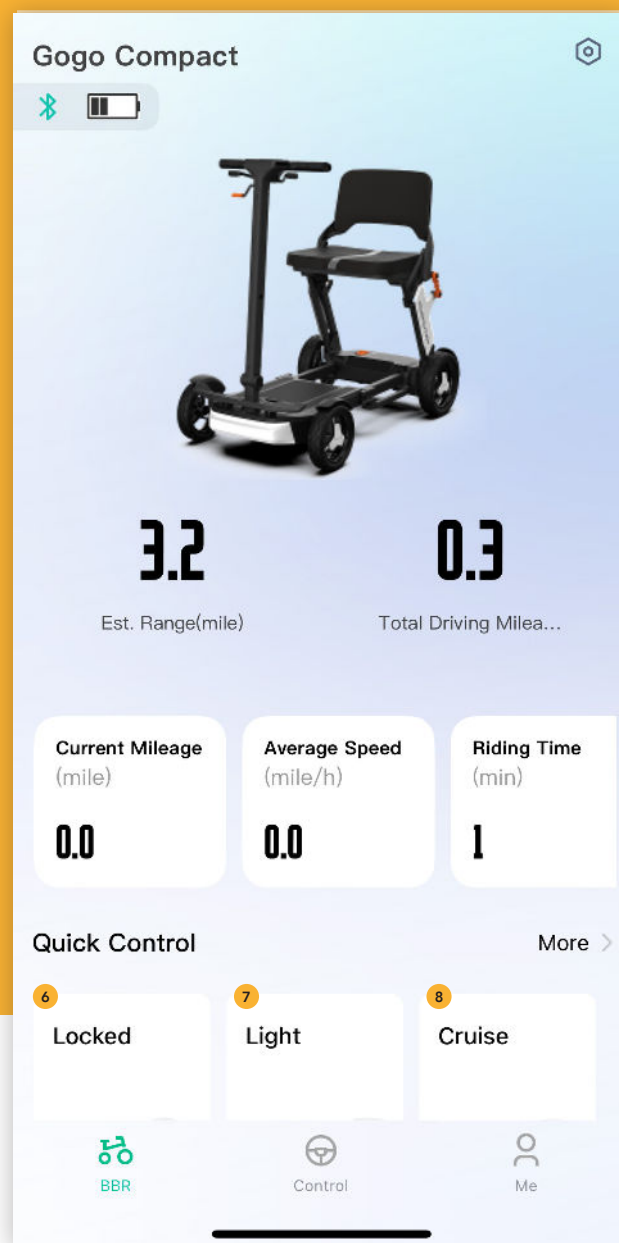

The horn and the alert tone can't be turned off. Some voice prompt tones also can't be turned off as listed below:

- No riding while charging
- Low battery. Please charge soon
- Steep Slope. Please get off and push the scooter
- Brake unlocked. Please engage it before riding

Click the More button to access the more menu

6. Locked

Click the lock/unlock button to turn on/off the P mode. (Parking Mode)

Watch a how to video now!



7. Light


Click the Light button to turn on/off the front and tail lights.

Watch a how to video now!




8. Cruise

Click the Cruise Mode button to turn on/off the cruise control.

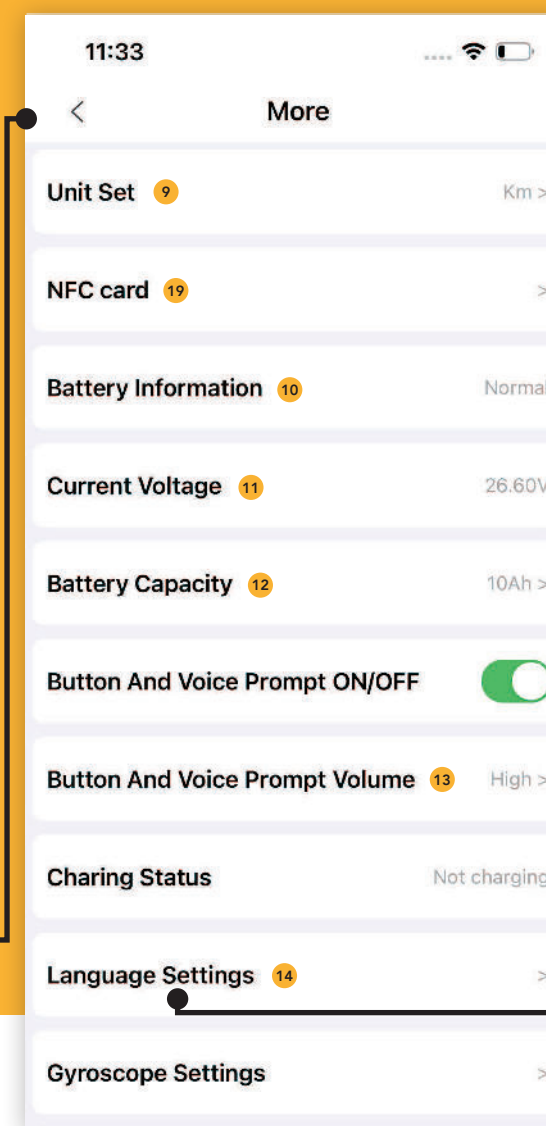

9. Unit set

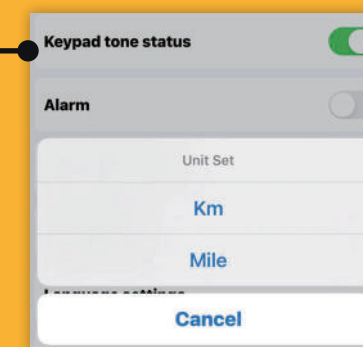


Watch a how to video now!



10. Battery Information to check the battery health status.


11. Current voltage to check the battery voltage.

12. Battery capacity

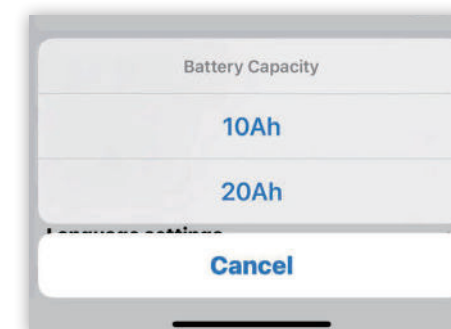

Battery Capacity allows you to choose 10 Ah or 20 Ah battery in the system to monitor the rest of the riding mileage. Make sure the battery capacity you select comply to the one on the label of the battery installed on your device.

13. Voice prompt volume

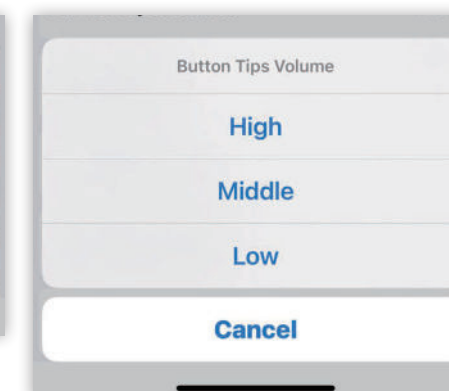


Click the Prompt Tone ON/OFF button to turn on/off the button and voice prompt sound.

Watch a how to video now!




14. Language settings



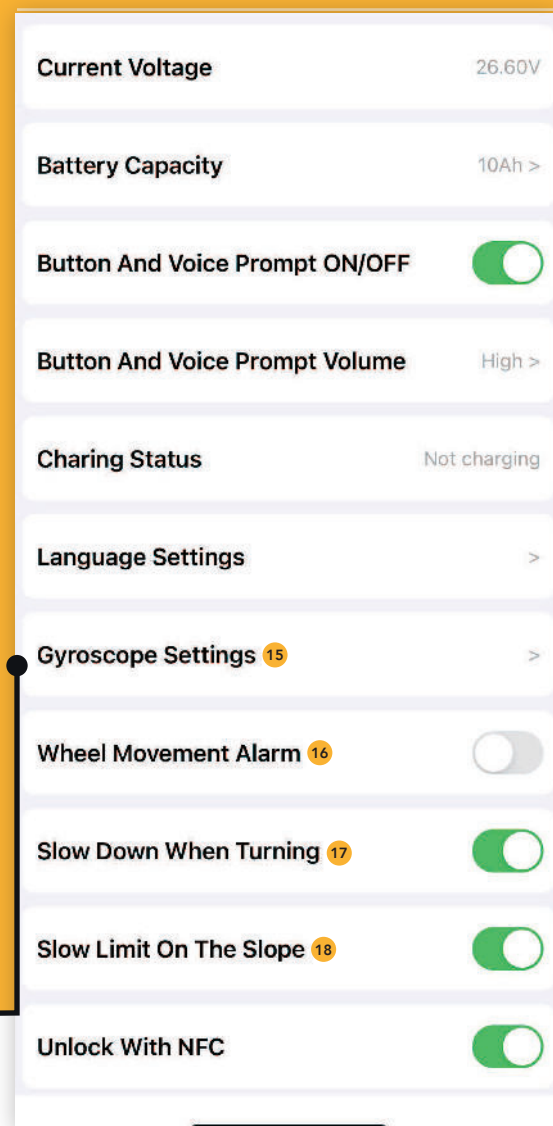

15. Gyroscope settings

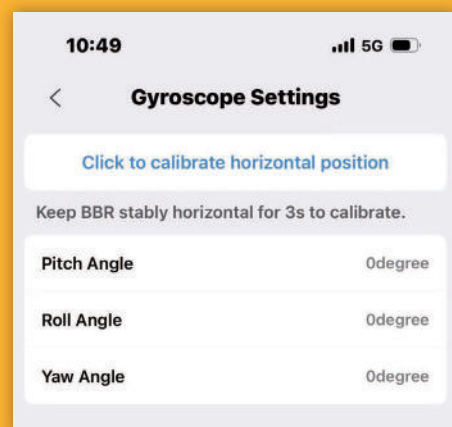

- 16** Turn on/off the wheel movement alert to engage the anti-theft mode. When the scooter is powered off, the alert will be activated if someone moves the scooter.

17. Slow down when turning



Turn on/off the turning speed to limit the top speed of turning under 4 mph.

18. Slow limit on the slope

Turn on/off the speed limit on the slope to limit the top speed on the slopes over 10 degrees.




It comes with two original factory cards when it leaves the factory. After reporting the loss, the original factory card cannot unlock the vehicle and cannot be replaced.

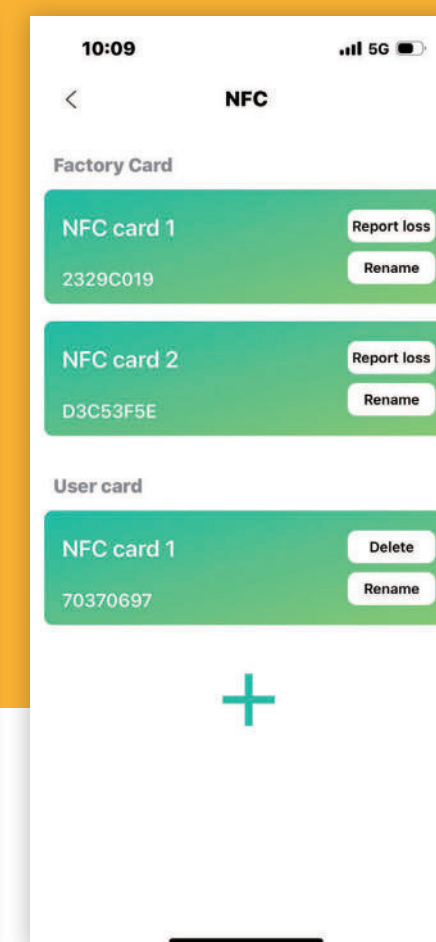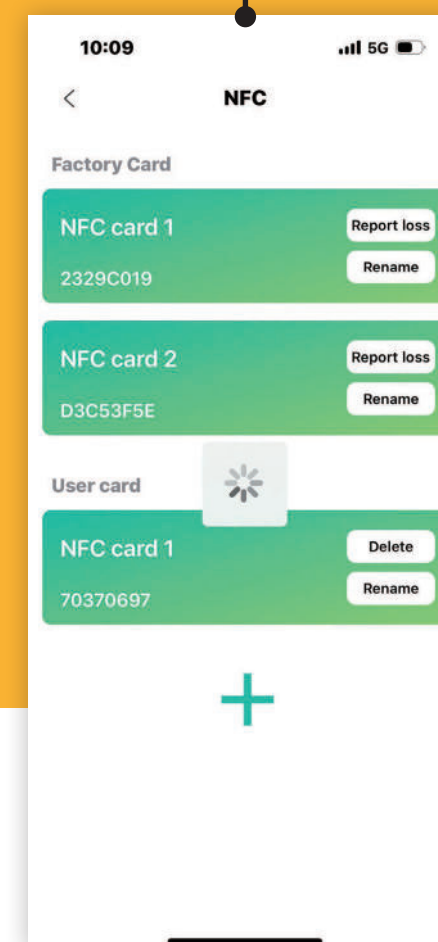

19. NFC settings

If you need to add an additional NFC card, click [+] on both the phone and scooter at the same time, the scooter panel enters a 15-second countdown, bring a blank NFC card close to the instrument panel on the scooter, and the card will be registered after 2 seconds. Users can use the registered NFC card to lock and unlock the scooter.

Watch a how to video now!

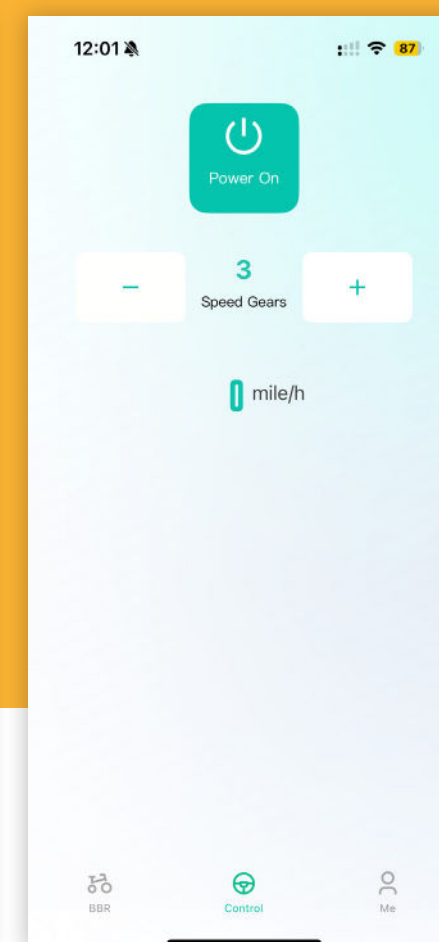

20. Control panel

Watch a how to video now!



REV-01 22/10/2025

Pride Mobility Products LTD 32 Wedgwood Road Bicester, Oxon OX26 4UL ENGLAND